

## **UNSTICK™ REUSABLE FRYING PAN LINERS INSTRUCTIONS FOR USE**

- Wash before initial use. Dry thoroughly before using.
- Can be used on all frying pans, including stainless steel, cast iron, and more
- Simply place your UNSTICK™ Frying Pan liner inside the bottom of your frying pan and cook food according to recipe. No need to adjust cooking time.
- Can be used with or without oil, marinades etc.
- Perfect for eggs, sausages, bacon, chicken, fish, beef, veggies, and more.
- Not for use with high temperature cooking
- Reversible
- Do not use sharp objects, or metal utensils.
- Rinse with warm, soapy water when finished.
- Do not use scouring pads, or abrasive cleaners.
- Dry thoroughly before storing.
- Do not fold or crease.
- Store either rolled up or flat.
- Dishwasher safe on top rack.
- Do not place in direct contact with heating elements, flames or burners
- DO NOT use above 500<sup>0</sup> F. Doing so will deteriorate the non-stick coating.