

UNSTICK™ REUSABLE CASSEROLE LINER INSTRUCTIONS FOR USE

- Wash before initial use. Dry thoroughly before using.
- Fold flaps at crease lines and insert liner into 9" X 13" casserole dish or rectangular baking pan
- Place batter, ingredients etc inside liner and bake according recipe.
- No need to adjust cooking time.
- Perfect for casseroles, lasagnas, meats, fish, vegetables, cakes, brownies and more.
- For use in electric, gas, microwave and toaster ovens..
- Reversible
- No need to grease or oil liner.
- Do not use sharp objects, or metal utensils.
- Rinse with warm, soapy water when finished.
- Do not use scouring pads, or abrasive cleaners.
- Dry thoroughly before storing.
- Do not fold or crease.
- Store either rolled up or flat.
- Dishwasher safe on top rack.
- **DO NOT** use above 500⁰ F. Doing so will deteriorate the non-stick coating.
- Do not place in direct contact with heating elements, flames or burners