



UNSTICK™ Oven Liner

Important Use and Care Instructions

Please read these instructions carefully prior to using the oven liner, as improper use may cause permanent damage to your oven.

CAUTION

FAILURE TO USE THE OVEN LINER AS DIRECTED COULD CAUSE DAMAGE TO YOUR OVEN.

DO NOT use directly on oven element or open flame.
DO NOT use above 500° F (260° C)
DO NOT use self-clean mode with oven liner in oven – remove it first

In gas ovens, DO NOT cover or block any holes or vents inside the oven – covering holes could create unsafe carbon monoxide levels

PLACEMENT FOR ELECTRIC OVENS WHERE ELEMENT IS VISIBLE:

Place oven liner directly under visible element.

PROPER PLACEMENT FOR ELECTRIC OVENS WITH NO VISIBLE ELEMENT:

Place oven liner on the bottom wire rack of the oven. **DO NOT** place on the bottom of the oven, as it may cause damage to your oven. You may place baking dishes and pans directly on the liner's surface. If the oven liner is larger than the oven rack, the oven liner should be cut to fit the dimensions of the oven rack. The oven liner should not touch the walls or door of the oven.

PROPER PLACEMENT FOR GAS OVENS:

Place oven liner on the bottom wire rack of the oven. DO NOT place on the bottom of the oven. You may place baking dishes and pans directly on the liner's surface. If the oven liner is larger than the oven rack, the oven liner should be cut to fit the dimensions of the oven rack. The oven liner should not touch the walls or door of the oven. DO NOT cover or block any holes inside the oven.

Please note: oven liners are safe to use in convection ovens. For optimum circulation, please ensure that you trim the oven liner so that there is between 1 and 2 inches between all sides of the oven liner and the walls (and door) of the oven. You may place baking dishes and pans directly on the oven liner's surface.

Care and Cleaning:

UNSTICK oven liners are dishwasher safe or can be washed in warm soapy water. Wipe dry with a soft cloth. To preserve the nonstick qualities, do not fold the oven liner or use abrasive cleaners or sharp objects. After use some discoloration may occur but will not affect performance.

FOR OVEN LINER FAQ'S PLEASE VISIT OUR WEBSITE AT:

www.unstick.ca